

# V6 Radio Quick Reference – DUAL VOLUME version




Top Frequency is **Active** Frequency  
 Bottom Frequency is **Standby** Frequency  
 Flashing Frequency Indicates Receiving on that Frequency

## Setting up the radio with a new headset


Because the radio also contains the intercom system, it can require some setup when switching headsets.

When using a new headset and if the intercom or radio is scratchy or loud when you speak, follow these steps to adjust the MIC level (note that Bose and Lightspeed headsets need a very low MIC level setting to avoid noise):

1. Press **MENU**
2. Rotate the **FREQUENCY KNOB** until you see **PILOT MIC LEVEL** (or **PAX 1 MIC LEVEL** if setting up Right side headset).

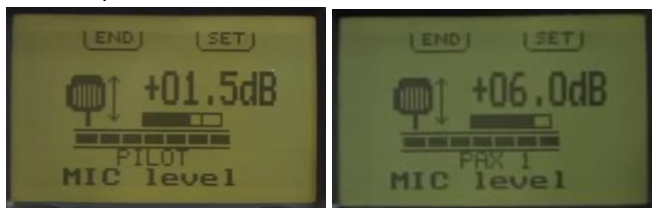

3. Press the **SET (FLIP-FLOP)** button to activate that function
4. Rotate the **FREQUENCY KNOB** while talking into the microphone until the bar graph clears up from left to right  $\frac{3}{4}$  of the way across the screen

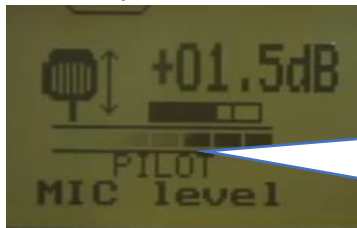

**MIC LEVEL**  
 Adjust until Bar Graph is  $\frac{3}{4}$  Clear from the left

5. Press the **MENU** button to exit that function

If you still hear cabin noise (or if your voice is not breaking through the intercom VOX), adjust the **VOX** (or **VOGAD**) setting until you cannot hear cabin noise, but your voice breaks through.

